

## International Warranty

Your PRiSM watch was manufactured using high-quality materials and subjected to rigorous testing in the strict tradition of Swiss watchmaking. Each watch has been individually tested to ensure that it functions correctly, it is waterproof up to 30 meters.

Inspection of goods: it is the customer's responsibility to identify that the watch is new and in 'as advertised' condition. Any manufacturing defects that are visible should be reported immediately to PRiSM Watches.

Sole authority: only PRiSM Watches company is authorized to determine the nature of a defect and whether or not the warranty is valid or not.

Your watch is covered for two years from the date of purchase against any manufacturing defect under the two main conditions below

1. Coverage: the warranty is valid for two (2) years and covers any functional defects that result from faulty manufacturing. PRiSM will repair your watch free of charge. The guarantee does not cover straps, glasses or any deterioration of the case or movement due to improper or inadequate use of the watch. The watch case of your PRiSM is not scratchproof. Any actions carried out by anyone else other than PRiSM (unless explicitly agreed to by PRiSM Watches) are not included in this warranty and will render it null and void.

2. Valid warranty card: in order to benefit from the limited warranty, your warranty card, received with your PRiSM watch, must be enclosed with the watch when it is sent for repair. The card must be valid and have an authorized stamp or signature, a purchase date, and the same serial number as the one engraved on the case back. The warranty is void and null for watches with parts that have been removed, modified, falsified, altered, replaced, erased or rendered illegible.


## HOW DO I GET MY WATCH REPAIRED?

Please write an email to [info@prismwatches.com](mailto:info@prismwatches.com) with the subject "REPAIR" for how to return your watch to PRiSM. We recommend that you send it by registered mail, carefully wrapped to avoid damages. This guarantee does not affect your legal rights as a consumer.

## INSTRUCTIONS – SETTING DATE AND TIME

The movement used in the PRiSM collection is the Sellita SW200-1 automatic and hand-wound movement. It features a date complication.

The crown provides three positions for hand winding the movement, setting the date and adjusting the time.

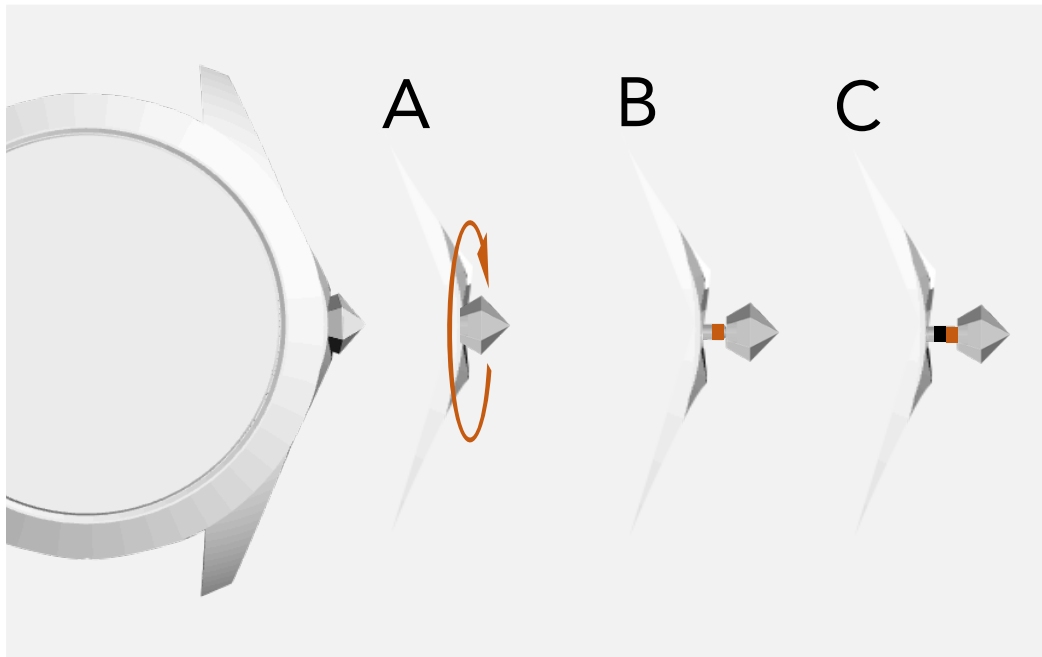

### A. MANUALLY WINDING THE MOVEMENT

First, keep the crown locked in initial position, then wind the crown clockwise. Wind the crown 15-20 times until the second starts moving.

### B. ADJUSTING THE DATE

Pull the crown in position B) and wind the crown clockwise to set the date.

### C. ADJUSTING THE TIME

Pull the crown in position C) and wind the crown anti-clockwise to set the time.